
Drive Belt Idler Pulley Replacement


Removal Procedure



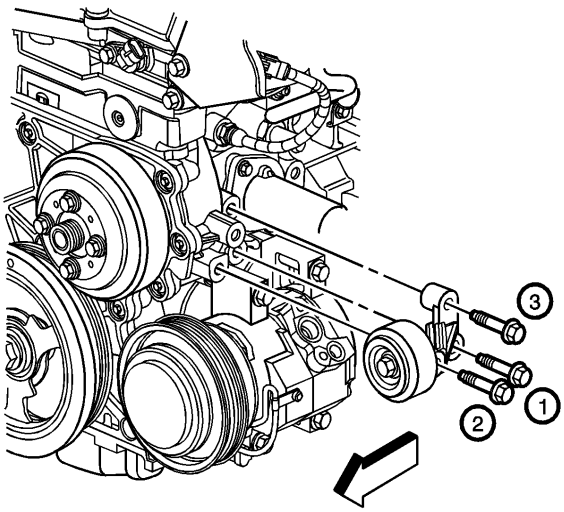

1. Remove the drive belt. Refer to Drive Belt Replacement .
2. Remove the left front wheel . Refer to Tire and Wheel Removal and Installation .
3. Remove the left front wheelhouse liner. Refer to Wheelhouse Panel Replacement .
4. Drain the engine cooling system. Refer to Cooling System Draining and Filling .
5. Remove the radiator outlet hose. Refer to Radiator Outlet Hose Replacement .
6. Remove the drive belt idler pulley bolts.
7. Remove drive belt idler pulley.

Installation Procedure

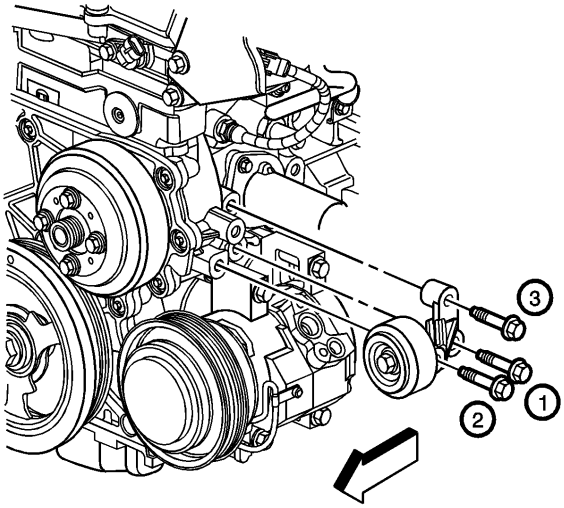



1. Position drive belt idler pulley to the engine.


   Notice: Refer to Fastener Notice in the Preface section.

2. Install the drive belt idler pulley bolts.

   Tighten
   Tighten the bolts in sequence to 50 N·m (37 lb ft).


3. Install the radiator outlet hose. Refer to Radiator Outlet Hose Replacement .
4. Install the left front wheelhouse liner. Refer to Wheelhouse Panel Replacement .
5. Install the left front wheel . Refer to Tire and Wheel Removal and Installation .
6. Fill the engine cooling system. Refer to Cooling System Draining and Filling .
7. Install the drive belt. Refer to Drive Belt Replacement .

Wheelhouse Panel Replacement (Front)

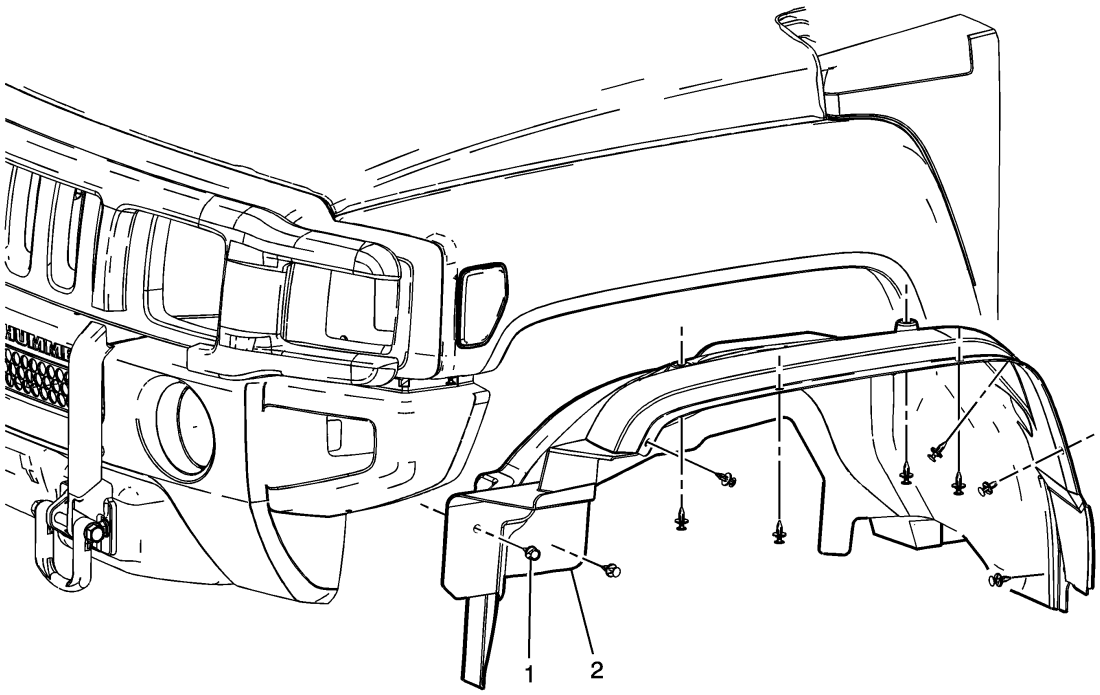

Callout	Component Name
Fastener Tightening Specifications: Refer to Fastener Tightening Specifications . ***Preliminary Procedures*** 1. Lift and support vehicle. Refer to Lifting and Jacking the Vehicle . 2. Remove the front wheel. Refer to Tire and Wheel Removal and Installation .	
1	Retainer, Front Wheelhouse Panel (Qty: 10)
2	Panel, Front Wheelhouse

Radiator Outlet Hose Replacement (LLR)

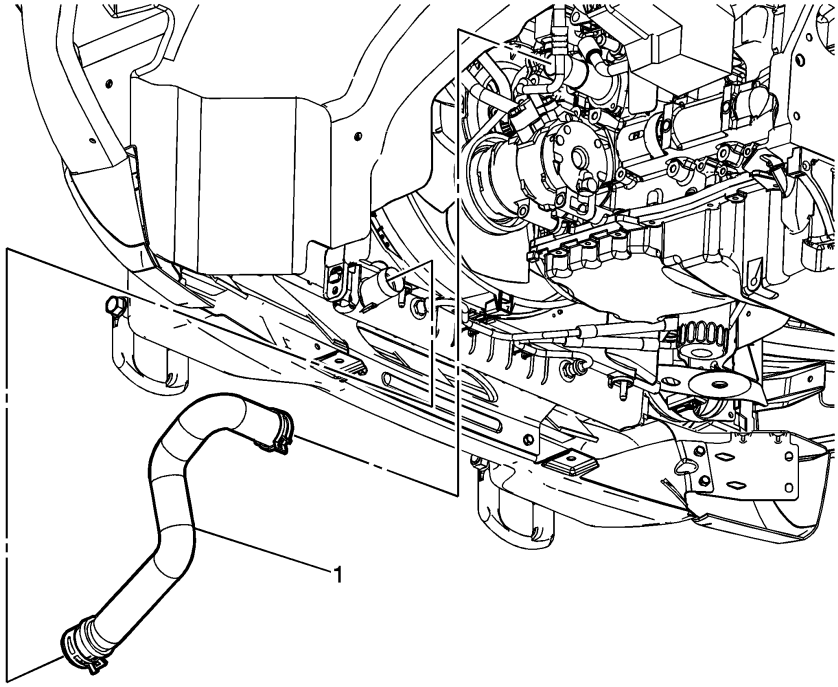

Callout	Component Name
Fastener Tightening Specifications: Refer to Fastener Tightening Specifications . ***Preliminary Procedure*** 1. Raise and support the vehicle. Refer to Lifting and Jacking the Vehicle . 2. Drain the cooling system. Refer to Cooling System Draining and Filling . 3. Remove the left front wheelhouse panel. Refer to Wheelhouse Panel Replacement . 4. Remove the engine shield. Refer to Engine Shield Replacement .	
1	Radiator Outlet Hose **Tip** Use J 38185 to release the radiator hose clamps.