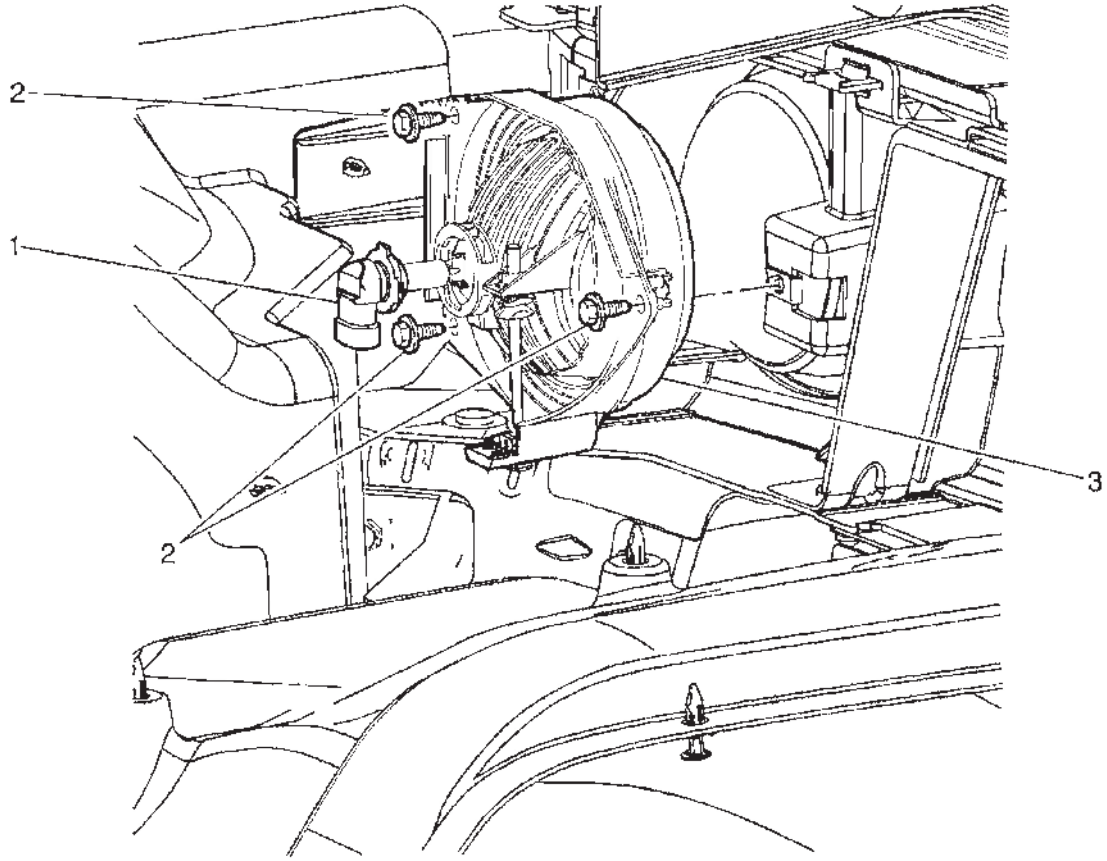


Fig. 104: Fog Lamp Replacement - Front
Courtesy of GENERAL MOTORS CORP.

Front Fog Lamp Replacement

Callout	Component Name
Preliminary Procedures 1. Remove either the LF or RF wheelhouse liner. 2. Remove the fog lamp bulb by twisting counterclockwise. 3. Disconnect the electrical connector, if replacing the fog lamp bulb.	
1	**CAUTION:** **Refer to Halogen Bulb Caution .** Bulb, Front Fog Lamp
	Bolts, Front Fog Lamp Retainer (Qty: 3) **NOTE:**

2	**Refer to Fastener Notice .** **Tighten:** Tighten to 10 N.m (89 lb in)
3	Lamp Assembly, Front Fog **Tip:** Aim the fog lamps after the replacement of a lamp assembly. Refer to **Fog Lamp Aiming**.

FRONT FOG LAMP BULB REPLACEMENT

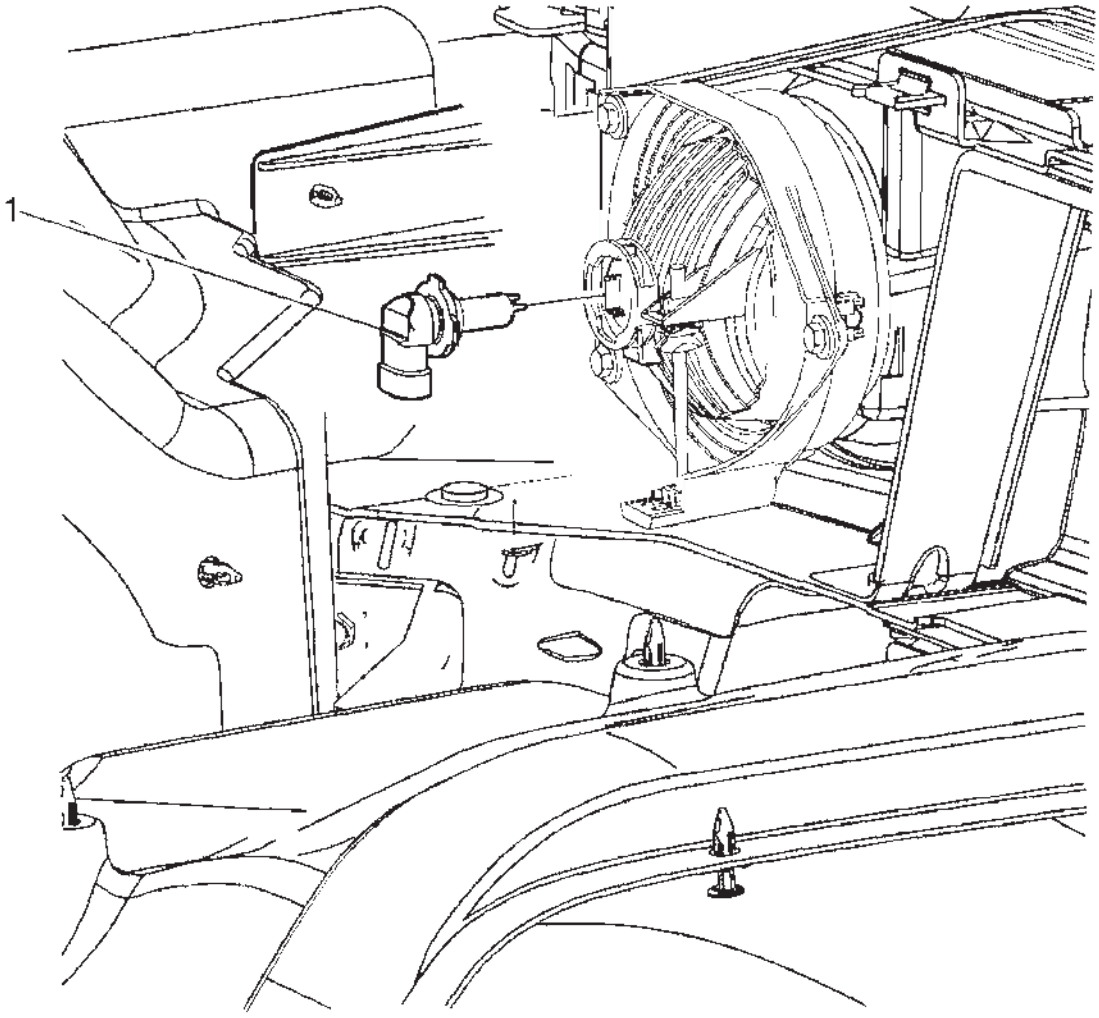


Fig. 105: Fog Lamp Bulb Replacement - Front
Courtesy of GENERAL MOTORS CORP.

Front Fog Lamp Bulb Replacement

Callout	Component Name